

LOG – input of QSO

- Esc** - delete input field
 - show LOG from the end and database Callloc from beginning
 - move from any page back to LOG page
- Enter** - evaluate input field, move CALL back for editing if input field is empty
- L+Enter** - move locator back for editing
- F9** - search CALL and LOC for string in input field
- F10** - save QSO (also Ctrl+Enter, Ctrl+F2)
- Insert** - edit QSO
- Alt+C** - delete all fields of new QSO input – also **Alt+L**
- Alt+Y** - delete last QSO from LOG – only last QSO from actual working band
- Ctrl+W** - move selected record from database to input QSO fields (also **Alt+W**)
- Ctrl+X** - vice-versa main and second locator (if exist in input QSO fields)
- Ctrl+Z** - vice-versa main and second CALL (if exist in input QSO fields)
- Ctrl+Y** - delete selected record from database Callloc
- Ctrl+L** - move locator like call from locator field to call field (like HA90KG)
- Alt+I** - input note for selected QSO. Save via F10
- šipky UP,DWN, PgUp, PgDwn** - move selection in LOG
- Alt+šipky UP,DWN, PgUp, PgDwn** - move selection in database
- Cross mode (CW/SSB) - autodetect, so nr must be 3digit
- number(1..9)+suffix – complete with preseted prefix from settings

LOG – band change, show

- F11** - enable/disable to show all monitored bands of LOG
- F12** - switch working band (only if more than 1 band is selected)
- Alt+A** - sort LOG in alphabetical order
- Alt+S** - move to Statistics page
- Alt+V** - sort LOG by distance order – from longest to nearest
- Ctrl+F3** - change to previous operator
- Ctrl+F4** - change to next operator
- Ctrl+G** - move to KST chat page
- Ctrl+K** - enable/disable frequency info from all used bands
- Ctrl+P** - show KSTchat window beside LOG window

LOG – transmit CW/SSB

- TAB** - start-stop CW/SSB CQ
- F1 - F8** - start transmit CW as set in memories - CW mode
- Alt+M** - switch mode CW/SSB
- Alt+T** - switch short – normal CW RST (5-E,0-T)
- Ctrl+A** - show/hide CW help in CW mode
- Ctrl+G** - move to KST chat page
- Ctrl+F6** - increase delay in repeated CQ by 1 sec.
- Ctrl+F7** - decrease delay in repeated CQ by 1 sec.
- Ctrl+F8** - decrease CW speed by 5chars/sec (1WPM)
- Ctrl+F9** - increase CW speed by 5chars/sec (1WPM)

LOG – internal chat

- Ctrl+I** - prepare info about sked into internal chat input field
- Alt+I** - enter to the internal chat (or note) input field. Enter send text to the internal chat, F10 into the note of selected QSO
- Alt+F1 – F8** - insert chat memory into internal chat at LOG page,
- /cq + text** - entering /cq at the beggining of text in chat input field, by Enter is send to KSTchat instead of internal chat

Statistics:

- G - graph points/nr of QSOs depending on time, for several contests (setup statistics first)
- Q - show number of QSOs depending on time
- B - show points depending on time
- L - map of big locators, highlighted are worked LOCs
- M - map of Europe with locators

Chat+DX cluster: - move from log LOG by Ctrl+G

- Ctrl+Enter - preset memory – Enter in setup
- ^A - help with preset memories (like CWhelp)
- F1..F8 - sselected memory to input field of KST chat
- Alt+PgUp - move selection to previous record in Chat users list
- Alt+PgDwn - move selection to next record in Chat users list

CHAT memory codes

- @ - own CALL used in the contest
- \$ - CALL from selected record in user list
- # - actual working band (2m,70cm)
- % - actual QRG (from TRX or entered manually)
- ^ - own locator used in the contest
- & - insert info(name) of selected call of chat user list
- ~ - insert GM-GA-GE based on actual time
- ! - insert content of LOG input field

CW memory codes

- @ - own CALL used in the contest
- \$ - CALL from new QSO input field
- # - actual number of entered QSO
- % - TX report
- ^ - own locator used in the contest
- & - received locator from new QSO input field
- * - received number from new QSO input field
- ~ - insert GM-GA-GE based on actual time
- ! - insert content of input field